

Description



The actuator series AVG6 has been designed to control the screwed globe valves series VG up to DN40. The actuator is equipped by a bidirectional synchronous motor at 600 N and available in ON-OFF, floating and proportional version. Fast and easy assembly. The actuator is equipped, for the proportional version, with a button for self-adjustment. The on-off switch is fitted with magnetic clutch.

Technical specifications

| | |
|---|---|
| Power supply | See schedule |
| Electrical connection | Screw terminal |
| Torque | 600 N |
| Max. stroke | 20 mm |
| Running time | See schedule |
| Materials | ABS cover, self-extinguishing |
| Protection degree | IP54 |
| Protection class | II |
| Working range °C | -10...+50°C |
| Storage temperature and humidity | -40...+50°C, 1...95% RH, non-condensing |
| Fluid temperature | < 150°C |
| Maintenance | Free |




| Models | Supply | Action | Consumption | Running time |
|--------------|--------------------|------------------|-------------|--|
| AVG6 | 600 | on-off, floating | 5,5 VA | 70 sec. w/stroke 15 mm 92 sec. w/stroke 20 mm |
| AVG6B | 230 V AC, 50/60 Hz | on-off, floating | 5,5 VA | 70 sec. w/stroke 15 mm 92 sec. w/stroke 20 mm |
| AVG6M | 600 | proportional | 5,5 VA | 70 sec. w/stroke 15 mm 92 sec. w/stroke 20 mm |

Electrical wiring

AVG6M (proportional)


Terminal J1:

- 1: 24 V AC
- 2: Common
- 3: Input signal. 4...20 mA (2...10 V DC) / 0...20 mA (0...10 V DC). W1 e W2 must be set according to the input signal.
- 4: Feedback signal. There is a signal 0...10 V DC or 2...10 V DC depending on the setting of W2.

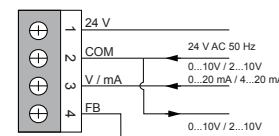

AVG6, AVG6B (on-off, floating)

- 1: Common
- 2: Stem down (direct way open)
- 3: Stem up (direct way close)




Installation

Place motor on the valve and, having placed in seat, tighten the locking screw (1).

Screw the brass nut of the motor shaft on the valve stem (2) and tighten the counter nut (3).

Make the electrical connections as shown in the previous diagrams and (only for AVG6M) provide for the jumper settings.

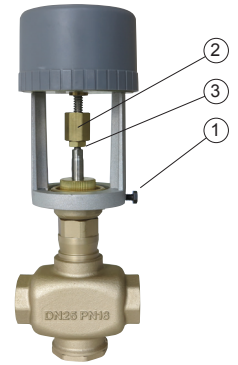

Setting AVG6M

W1: mA / V DC. Allows to choose whether the input signal is in voltage or in current. This jumper must be set along with W2 to select the input signal to J1.

W2: 4...20 mA (2...10 V DC) / 0...20 mA (0...10 V DC). This jumper must be set with W1 to select the input signal to J1.

W3: Reverse operation. Moving the jumper inverts the logic of operation compared to the input signal.

LED Status indicator (work):

Normal operating status: flashes slowly (1 sec on, one sec off). During the self-adjustment of the actuator on the valve (after pressing S1 for at least 3 sec): flashing quickly (for 0.25 sec on, off 0.25 sec)


Self-adjustment in an error state: blinks twice quickly and off for a long time (on 0.25 sec, off for 0.25 sec, twice, then off by 1.25 sec)

LED indication of the rotation direction of the motor:

When the LED **D60** lights up, the valve shaft moves downward. When the valve shaft reaches the bottom and hold the position for 25 sec, the LED turns off.

When the LED **D50** lights up, the valve shaft moves upward. When the valve shaft reaches the top and hold the position for 25 sec, the LED turns off.

Printed circuit board (AVG6M)

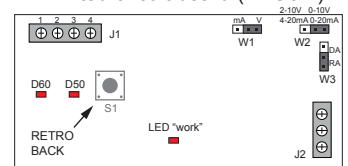

Self-adjustment of the actuator to the valve. Each actuator must be adapted to the valve to which it is coupled.

Press and hold the “**S1**” key for 3 sec, the actuator automatically will enter the self-adjustment. The LED “work” is flashing rapidly (on 0.25 sec., off 0.25 sec.). The valve shaft moves down to the bottom, and then maintains the position for 25 sec and then move upward until the upper point. The self-adjustment does not end until the valve shaft does not hold the final position for 25 sec.

To self-adaptation occurred (the previous data is overwritten), the actuator returns to normal operation. Otherwise (the previous data is not overwritten), will be reported the failure of the state of self-adjustment (on 0.25 sec., off 0.25 sec., twice, then off by 1.25 sec.). You can hold down the “**S1**” key for 3 sec to retry the process of self-adjustment, or reboot (power cycle) of the actuator to return to normal working state.

Possible errors of self-adjustment:

1: It occurs in the case where the stroke is reached less than half the nominal stroke.

2: The connection of the potentiometer is wrong (terminal J2). Correct way: when the valve shaft is downward the potentiometer has the maximum value, when the valve shaft is upward the potentiometer has the minimum value.

Dimensions

